


# SWING-AWAY LATERAL INSTALLATION FOR THE E2S BACK


## E2 Swing-Away Lateral Installation :

### E2 BACK MOUNTING HARDWARE


use **TRC2987-00**  
M6-1.0 x 20mm Flat Socket Cap

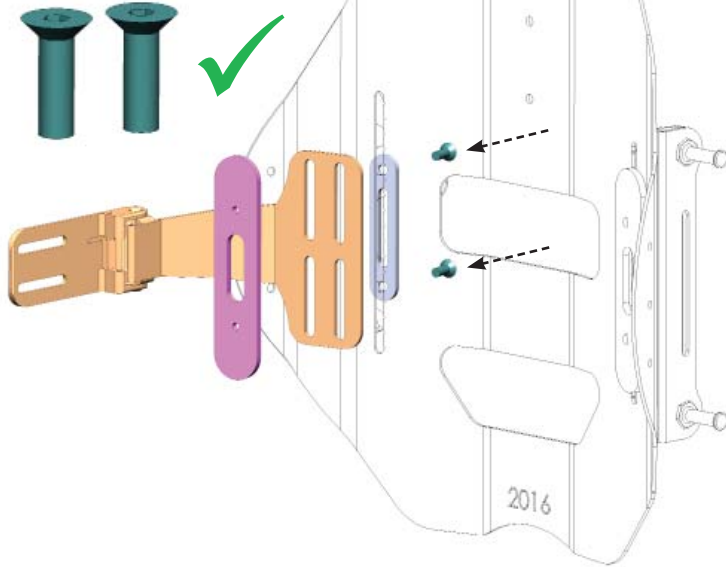

### ELITE BACK MOUNTING HARDWARE

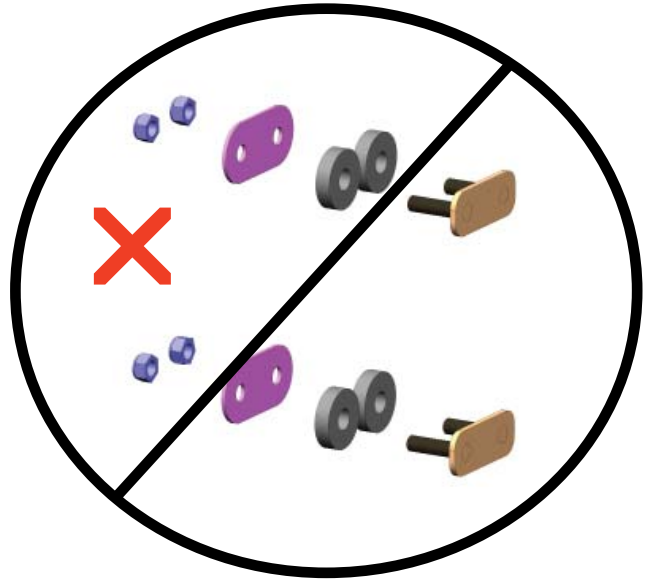

### MATRIX E2S BACK STANDARD LATERAL INSTALL

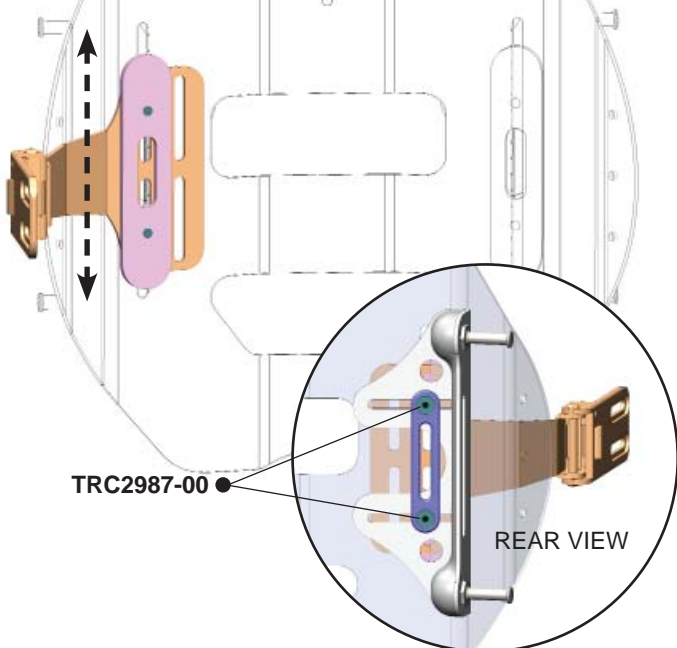

### MATRIX E2S BACK OFFSET LATERAL INSTALL

